



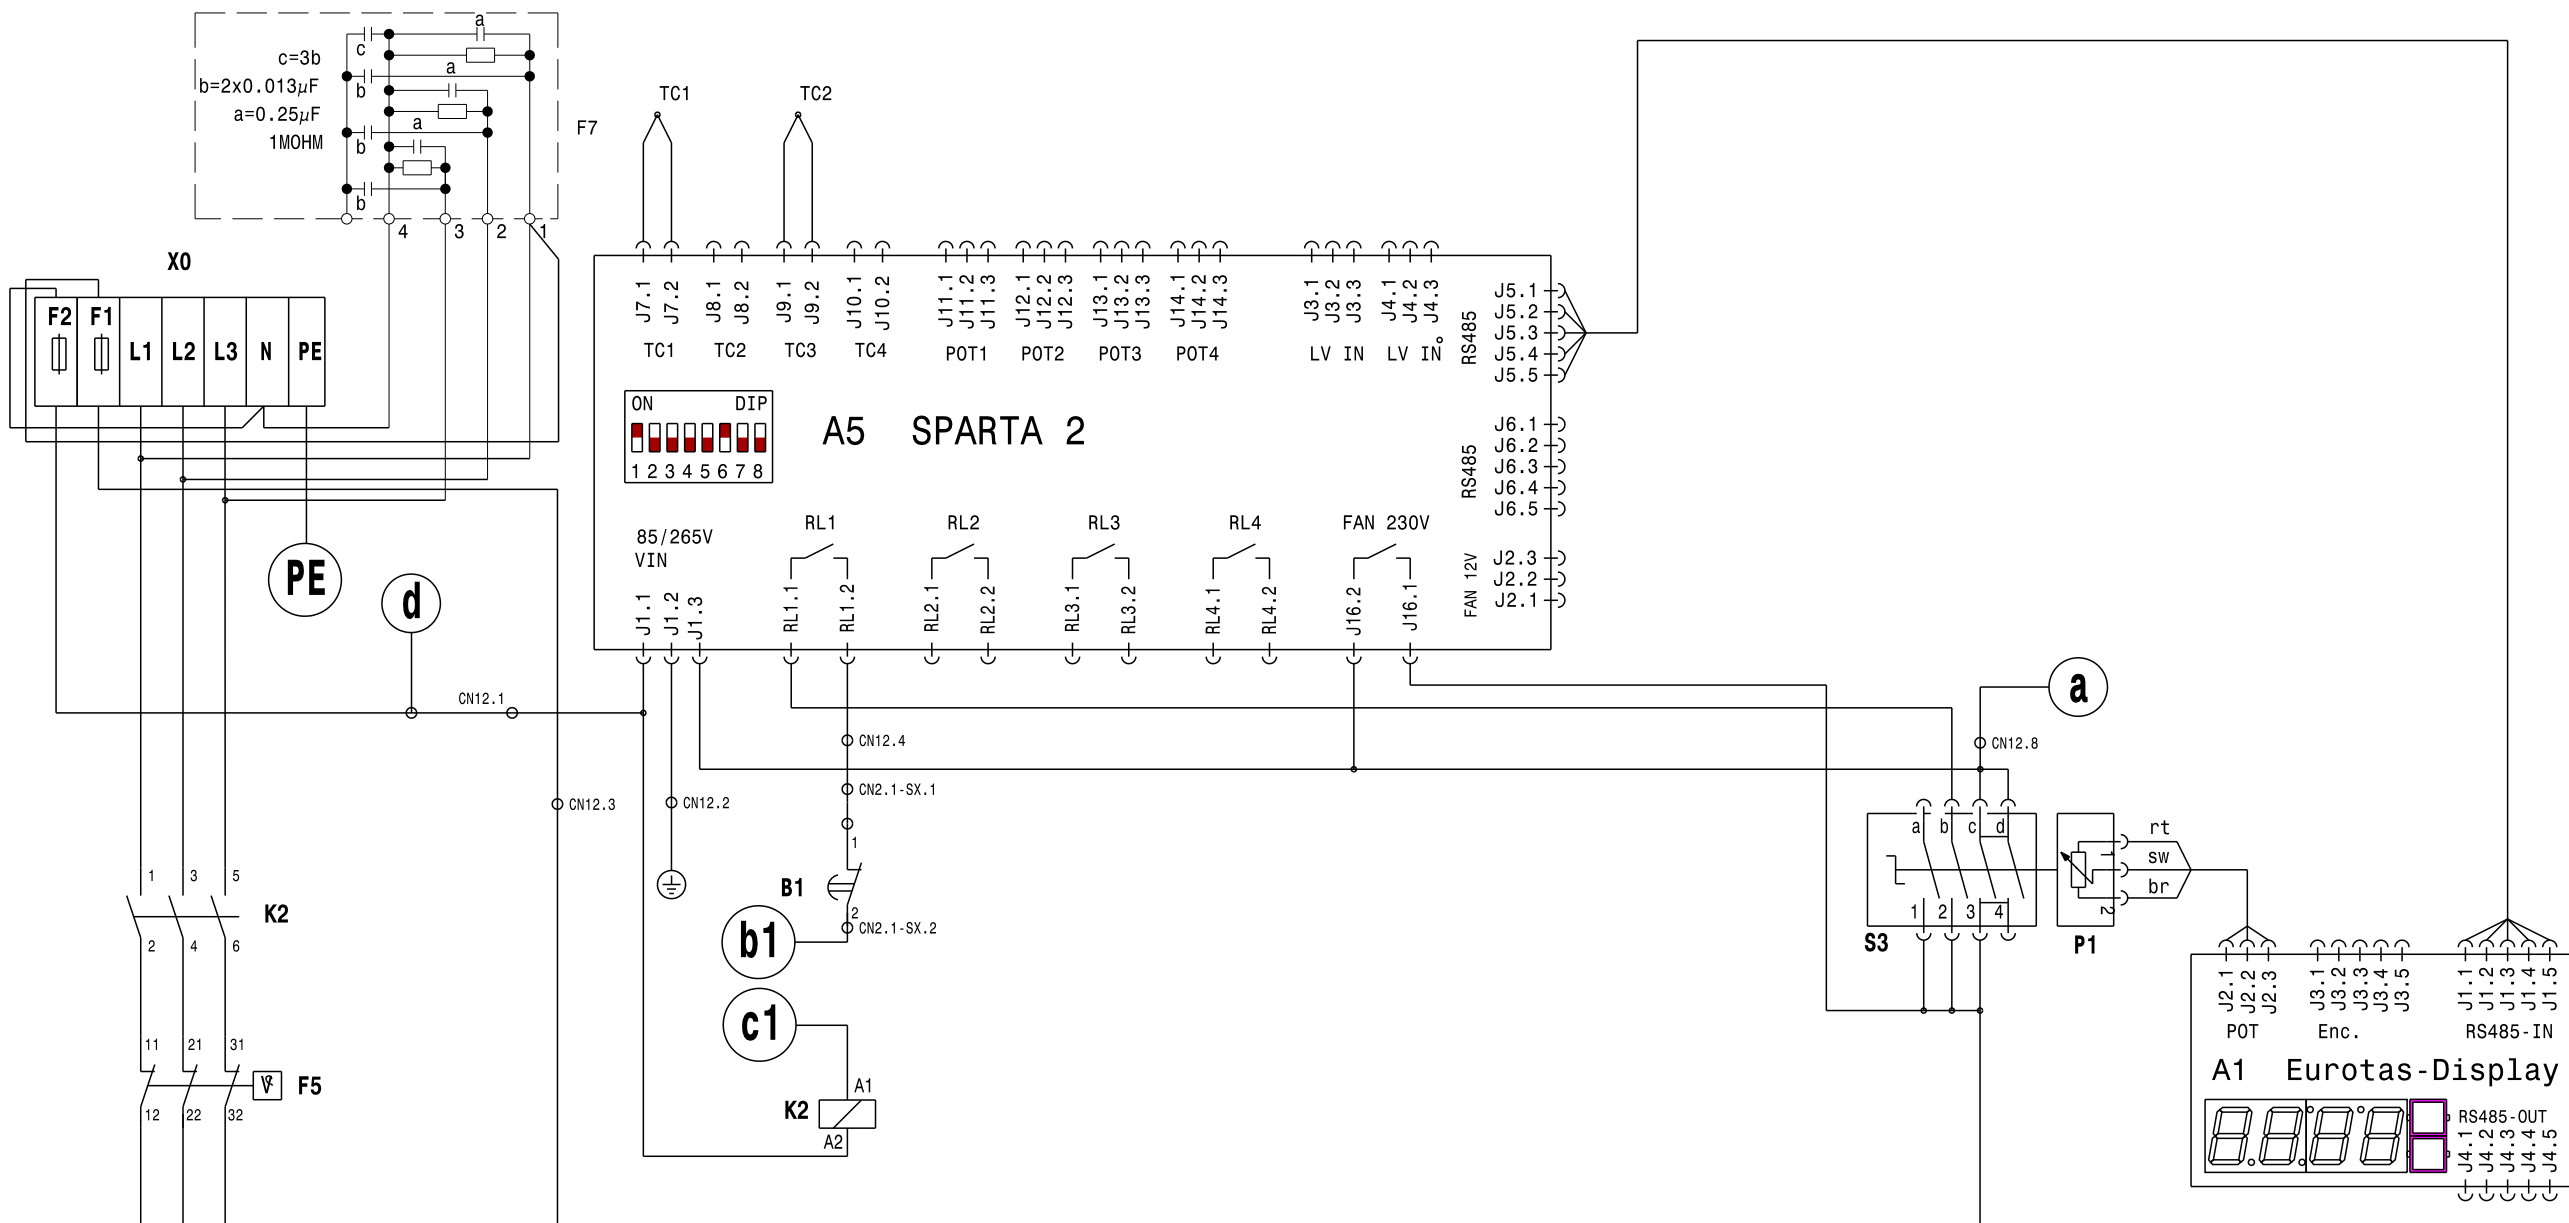


	10 lt.	
P	12.0	kW
I	15.3	16.7
U	380	415
		V

Common Partlists	
A1	Eurotas Display
A5	Control unit SPARTA
TC1	Thermocouple K type (oil level)
TC2	Thermocouple K type (work)
E1	Heating Elements
F1/2	Fuse auxiliary 1AT
F7	Safety therm. 259°C
K3/K4	Safety/Working Contactor
P1	Potentiometer 10kohm
S3	Switch
X0	Mainterminal
F7	EMC FILTER
Oil pump filtering	
F3/F4	Fuse 1.5AT
S1	Activation pump switch
T1	Power supply 24Vdc
M1	Oil pump

OIL PUMP FOR FILTERING

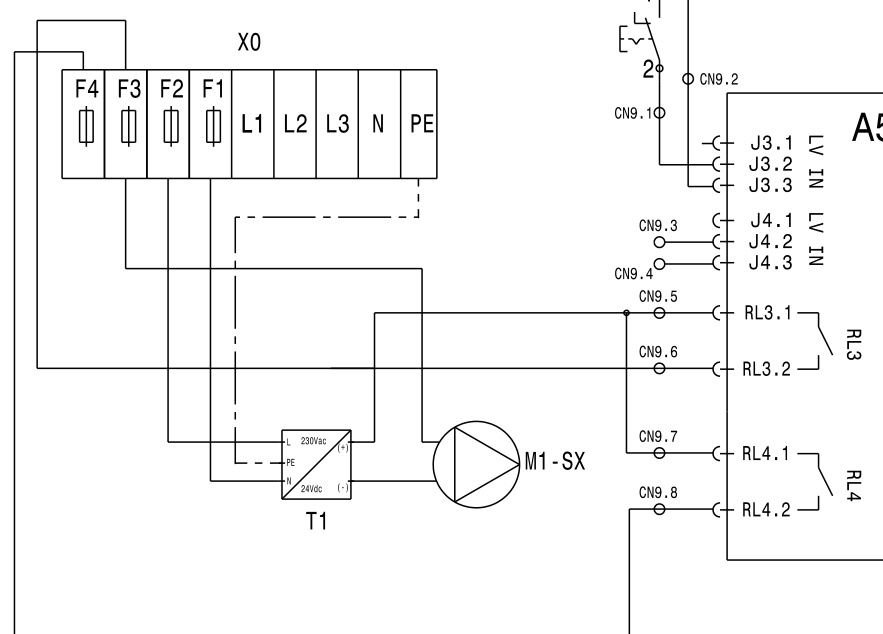

ENERGY OPTIMIZER

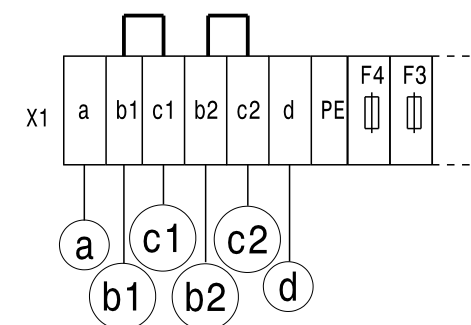

NOTE:
 1) PE TERMINAL BLOCK IS ALREADY CONNECT TO THE GROUND
 2) THE JUMP CONNECTION BETWEEN b1/c1 AND b2/c2 IS ALWAYS PRESENT
 3) TO CONNECT EXTERNAL ENERGY OPTIMIZER REMOVE JUMPER b1/c1 FOR SINGLE TANK AND ALSO b2/c2 FOR SECOND TANK IF IS PRESENT AND CONNECT THE CABLE FOLLOWIN NORMS DIN 18875