

KITDEMINERALI


Art. 413.KITDEMINERALI

Einbauanleitung für den Umrüstkit SPR auf VE-Wasser bei Flockeneisbereitern


Rückwand vom Gerät entfernen.
Blauen Nylonschlauch durchtrennen.




Installieren Sie das John-Guest T-Rohrstück zwischen
den blauen Nylonschlauch. Den Nylonschlauch einfach
in das T-Stück hineindrücken.

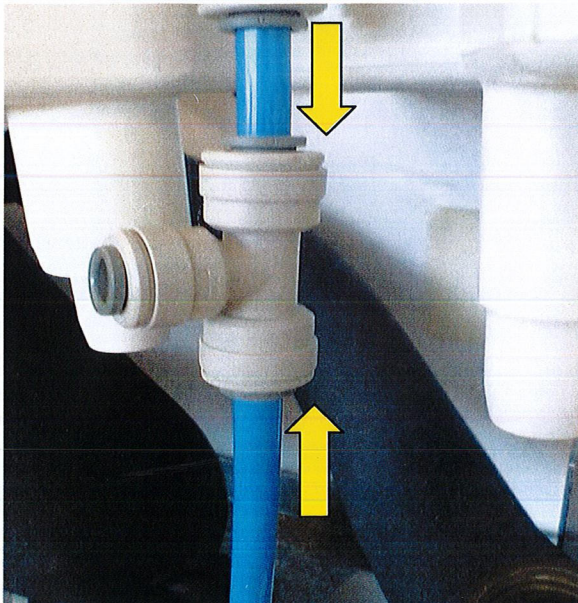

Drücken Sie das Kupferrohr vom Wasserdrucksensor
seitlich in das John-Guest T-Rohrstück.

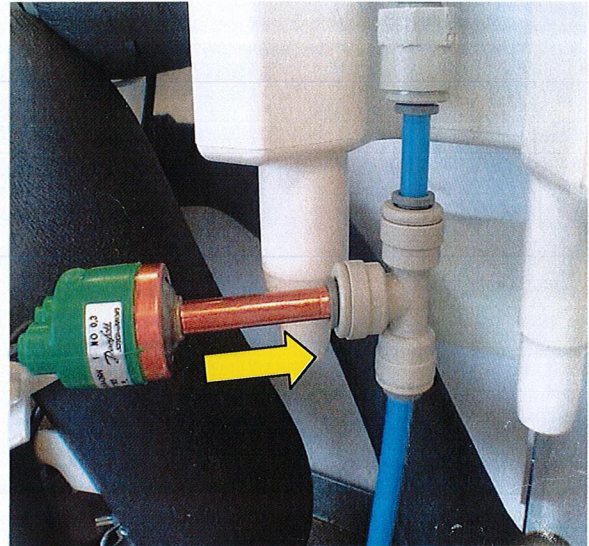

Deckel vom Wasservorratsbehälter. Befestigen Sie
Lösen Sie die beiden Sechskantmutter auf dem
jetzt die beiden Kabel vom neuen Wasserdrucksensor
an den beiden Sensorstiften. Die zwei Sechskant-
mutter wieder aufschrauben.

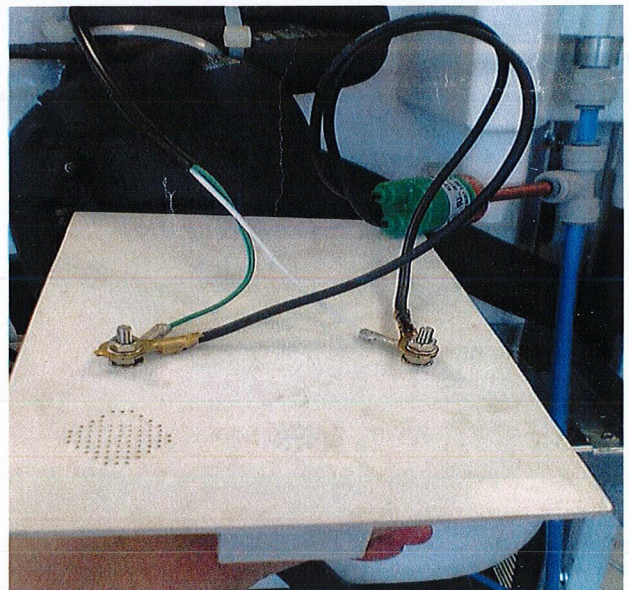

Befestigen Sie wieder die Rückwand am Gerät.

KITDEMINERALI

Art. 413.KITDEMINERALI


DEMINERALIZED WATER CONVERSION KIT INSTALLATION INSTRUCTIONS

Remove the rear panel.


Cut the nylon water inlet tube.




Install the John Guest "T" fitting connecting the nylon water inlet tubes to the upper and lower seats of the quick fitting

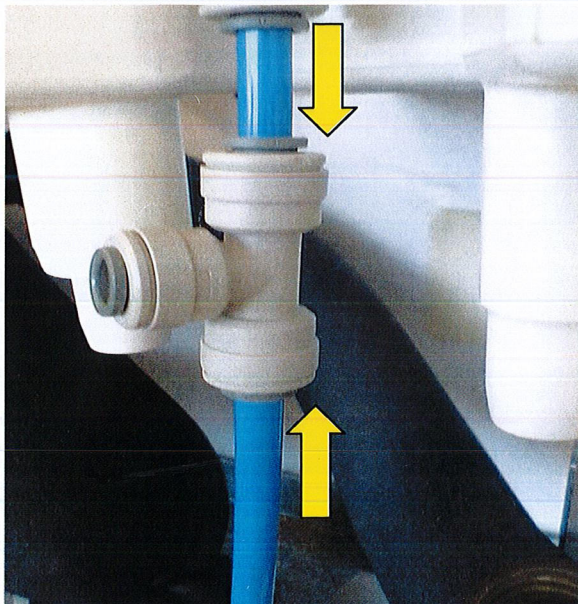

Press the water pressure copper tube into the side quick fitting seat.

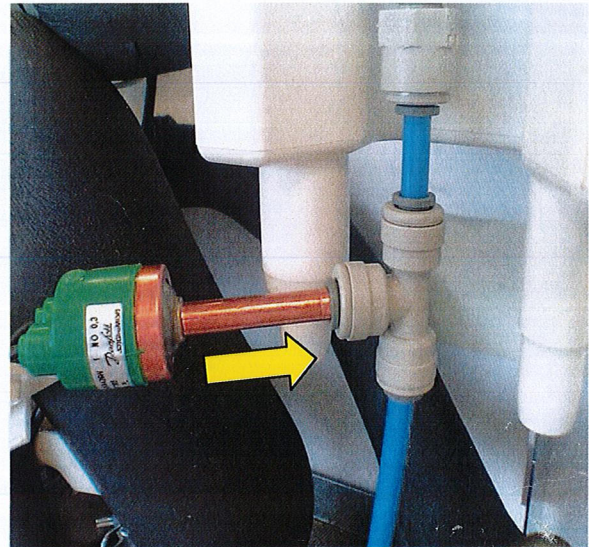

Unloose the two metal nuts of the water level sensor located on the water reservoir cover, connect the two wires of the water pressure control in parallel with the standard water level sensor, then re-install and tight the nuts

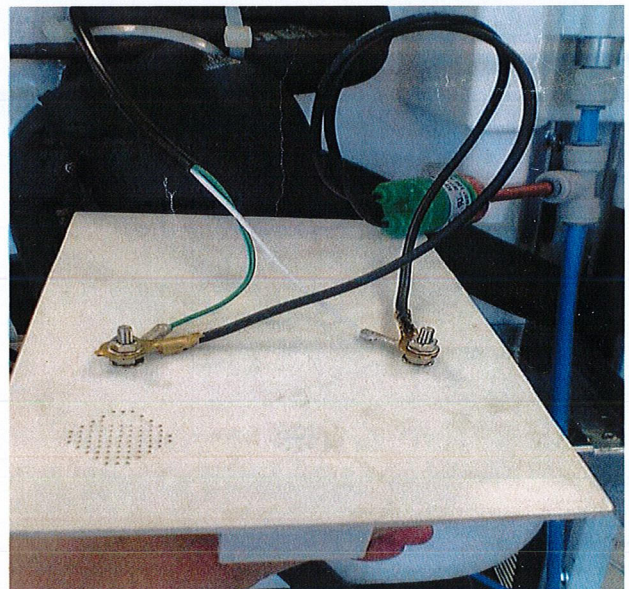

Re-install the rear panel.